

CoaguChek[®] XS System

User Manual for Self-Testing



The contents of this manual, including all graphics and photographs, are the property of Roche Diagnostics. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Roche Diagnostics.

Roche Diagnostics has made every reasonable effort to ensure that all the information contained in this manual is correct at the time of printing. However, Roche Diagnostics reserves the right to make any changes necessary without notice as part of ongoing product development.

For USA: For Prescription use only

This user manual was created by the Roche Diagnostics Engineering Operations department. Direct questions or concerns regarding the contents of this document to:

Roche Diagnostics
Engineering Operations Department
9115 Hague Road
P.O. Box 50457
Indianapolis, IN 46250-0457
USA

COAGUCHEK, ACCU-CHEK and SOFTCLIX are trademarks of Roche. All other trademarks are the property of their respective owners.

© 2007-2016, Roche Diagnostics.

US Order Number: 04999045001 (05)-0416

Distribution in USA by: Roche Diagnostics, Indianapolis, IN

This document is available electronically at www.coaguchek-usa.com.

Revisions to this document are provided by Roche Diagnostics when necessary. No part of this document may be reproduced in any form or by any means without prior written consent.

Manual version	Revision date	Changes
Version 2.0	November 2009	New document
Version 3.0	March 2011	Revised to update meter images, add disposal information and update product specifications section.
Version 4.0	September 2013	Revised ERROR 6 and ERROR 7 verbiage.
Version 5.0	April 2016	Revised to add Rx only statement.

Table of Contents

About this Manual.....	1
Symbols and Abbreviations	1
User Resources	2
Training DVD	2
Getting Started	2
User Manual	2
Test Strip Package Inserts	3
Lancet Device Package Inserts	3
The CoaguChek XS System	4
Anticoagulation Medication	4
Blood-clotting Time.....	4
How the System Works	5
The CoaguChek XS Meter	6
Operating Conditions	7
Getting Started.....	8
Batteries.....	8
Installing (or Replacing) Batteries.....	9
Meter Setup	10
Setting the Date and Time	11
The Meter's Display	14
Code Chip	14
Inserting a New Code Chip.....	15
Integrated Quality Controls	16

Testing a Blood Sample	17
Tips for a Good Fingerstick.....	17
Important Notes About Blood Testing.....	18
Always	18
Never	18
Infection Control.....	19
Preparing for a Test	20
Performing a Test.....	22
Very Low or Very High Test Results	27
Memory.....	28
Storing Test Results in Memory.....	28
Reviewing Stored Test Results	28
Erasing Stored Test Results	30
Cleaning the Meter	32
Cleaning the Exterior	32
Cleaning the Test Strip Guide.....	33
Error Messages	35
Other Information	43
Product Limitations	43
Product Specifications	43
Support/Services	44
Symbols.....	45
Disposal of the Meter, Test Strips, Lancets, and Batteries	50
Warranty.....	51

About this Manual

Symbols and Abbreviations

The test strip insert, the label on the back of the meter, the User Manual, and other packaging material may contain the following symbols or abbreviations:



Use by



Batch code/Lot number



In vitro diagnostic medical device



Catalog number



Consult instructions for use



Caution, consult accompanying documents.
Refer to safety-related notes in the manual
accompanying this instrument



Manufacturer



Temperature limitation (Store at)



The system fulfills the Canadian and U.S. safety
requirements (UL LISTED, in accordance with UL
61010A-1:02 and CAN/CSA-C22.2 No.61010-1-04).

Rx only

For prescription use only



Global Trade Item Number

User Resources

Several resources are available to help you use and maintain the CoaguChek XS System.

Training DVD

The CoaguChek XS System DVD is for new users of the CoaguChek XS System. This program will help you get comfortable with the CoaguChek XS Meter and the testing procedure.

Getting Started

The Getting Started guide shows you how to perform your first coagulation test on the CoaguChek XS Meter.

User Manual

This CoaguChek XS System User Manual is a comprehensive guide to the meter and test strips. It is designed to provide answers to your questions about the meter's operation and use. Read this entire manual carefully, and refer to it as necessary.

Test Strip Package Inserts

Be sure to read the test strip package insert for important updates and keep the insert from your current test strip package for future reference.

Lancet Device Package Inserts

Be sure to read the lancet device package insert to learn how to use the lancet device and for important updates. Keep the insert from your current lancet device package for future reference.

The CoaguChek XS System

The CoaguChek XS System measures blood-clotting time (Prothrombin Time) for people who are taking anticoagulation medications such as Coumadin® or warfarin. The CoaguChek XS System measures blood-clotting time using blood from the fingertip.

Anticoagulation Medication

Anticoagulation medications, also known as blood thinners, are prescribed to avoid unwanted clots. Your blood-clotting time must be monitored to ensure that your medication dosage is correct.

Blood-clotting Time

The rate at which blood clots is measured in units called INR. It is very important that you stay within your target INR range. If your INR is too low, the risk of blood clots increases. If your INR is too high, the risk for internal bleeding increases.

Everyone's INR is different. Your doctor determines the best INR range for you, depending on why you are taking anticoagulants and how you react to them. Your doctor also determines how often your blood should be tested. Your doctor needs to know your blood-clotting time in order to successfully treat you.

How the System Works


The CoaguChek XS System includes a meter and CoaguChek XS PT test strips. Each box of test strips has its own code chip that you insert into the meter. The code chip contains important information about the test strips such as their expiration date and lot number.

The CoaguChek XS System makes measuring blood-clotting time easy. The display on the meter guides you through the testing process. With the code chip inserted in the meter, you simply insert a test strip and apply a blood sample when the meter is ready. The meter displays the result in about a minute. The meter automatically stores the result in memory so that you can easily recall results.

The CoaguChek XS PT test strip contains various ingredients. When a blood drop is applied, the meter starts the test and the blood mixes with the ingredients on the test strip. When the meter determines that the blood has clotted, it stops the measurement and calculates the result.

The CoaguChek XS Meter

- A Display
- B M (Memory) Button
- C ON-OFF Button
- D Test Strip Guide Cover
- E Test Strip Guide
- F Battery Compartment Cover
- G Code Chip Slot
- H SET Button
- I Data Port

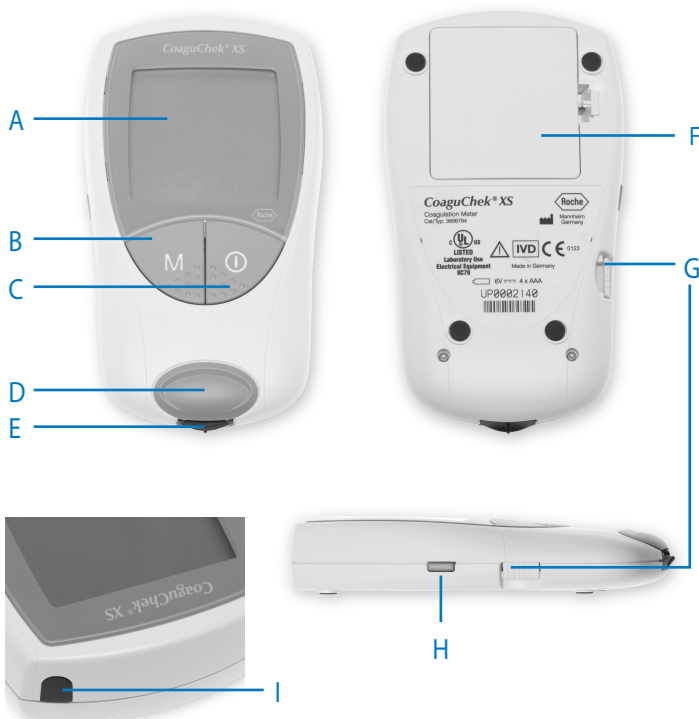

Operating Conditions

To ensure that the CoaguChek XS Meter functions correctly, follow these guidelines:

- Use the meter at room temperature, between 59°F and 90°F (15°C and 32°C).
- Use the meter at a relative humidity of less than 85%, without condensation.
- When testing, keep the meter level.
- If you store the meter for a period of time, remove the batteries.
- Do not use the meter at an altitude higher than 14,000 feet (4,300 meters).
- Do not use the meter near a strong magnetic field, such as a microwave oven, as this may interfere with the meter's proper operation.

Note: The CoaguChek XS Meter automatically shuts off after 3 minutes if no buttons have been pushed.

Getting Started

Refer to the Getting Started guide to learn how to set up the meter and prepare for and run your first blood-clotting time test.

Batteries

The CoaguChek XS Meter uses 4 AAA batteries. The recommended batteries, alkaline-manganese batteries, should last for approximately 300 tests.

When you turn the meter on, the display briefly shows the battery symbol. The battery symbol is divided into 4 segments. With new, fresh batteries in the meter, the battery symbol shows all 4 segments.



When only 1 segment appears, replace the batteries. When only 1 segment appears you can still access results stored in the meter's memory.



If you insert new batteries within 1 minute of removing the old batteries, the date and time settings will remain in memory. But if you do need to reset the date and time, refer to the Meter Setup section in this manual.

The meter saves battery power by automatically turning off after 3 minutes, unless you press a button or insert a test strip. Even when the batteries are removed, the test results are saved in memory.

Installing (or Replacing) Batteries

Have ready 4 AAA batteries.

1. Open Battery Compartment



With the meter turned off, turn it over. Press the latch gently inward and lift the cover. Remove the old batteries, if necessary.

2. Insert New Batteries




Position the batteries according to the diagram inside the battery compartment. Replace the cover. Turn the meter back over.

Whenever you put batteries in the meter, it automatically goes to Setup mode.

3. Turn Off

Turn the meter off .

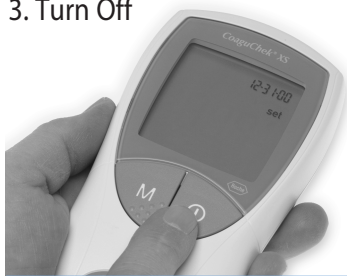

Meter Setup

The CoaguChek XS Meter is preset with the U.S. date format (month-day-year) and U.S. time format (12-hour as opposed to 24-hour).



Before you use the meter for the first time—or if there is no battery power for more than 1 minute—you'll have to set the current date and time.

Setting the Date and Time

The date and time settings are important. Each time you run a test, the meter compares its date with the test strip's expiration date. If the test strips are expired, the meter displays an error message and prevents you from running a test.

Whenever you put batteries in the meter, it automatically goes to Setup mode (where you set the date and time). You can also go to Setup mode at any time by pressing the SET button (■).


To set the date and time, you'll use these buttons:


-  to change a setting.
-  (SET) to accept a setting.



1. Go to Setup Mode




If the meter is not already in Setup mode, press the SET button .

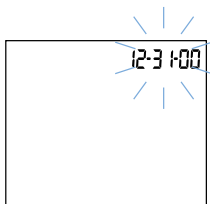


The date format flashes in the upper-right corner.


2. Set Today's Date

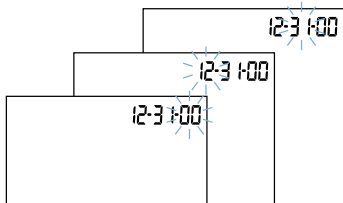


Press the SET button .

Press the M button  to change the year.

Press the SET button .


Press the M button  to change the month.

Press the SET button .


Press the M button  to change the day.

Press the SET button .


3. Set Current Time

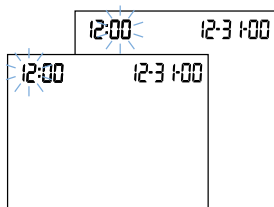

Press the SET button .

Press the M button  to change the hour.


Press the SET button .



Press the M button  to change the minutes.

Press the SET button .

4. Power Off




Power the meter off .


If, in the future, you need to change the date and time, press the SET button  to re-enter Setup mode. After you change the date and time, just turn the meter off .

Other set-up choices in the meter must be set or changed by your doctor.

The Meter's Display

When you turn the meter on, it briefly shows all the display's letters, numbers, and symbols. Regularly check that all segments of each letter, number, and symbol appear. Please compare your meter's display to the meter display shown here on this page.

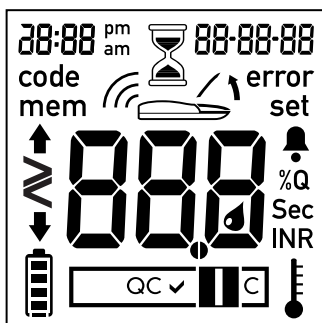

You can display all the letters, numbers, and symbols for a longer time to allow comparison. To do this, turn the meter on and then hold down the ON-OFF button .

The full display should appear as shown at left.

Code Chip

Each box of test strips comes with its own code chip. The code chip provides the meter with information such as the lot number and expiration date of the test strips.

Before each test, make sure the correct code chip is in the meter. Each time you open a new box of test strips, replace the old code chip with the new one.

Protect the code chip from moisture and also from equipment that produces magnetic fields, such as a microwave oven.

Inserting a New Code Chip


Have the correct code chip ready.

1. Remove Old Code Chip



With the meter turned off, remove the old code chip and throw it away.

2. Match Code Numbers

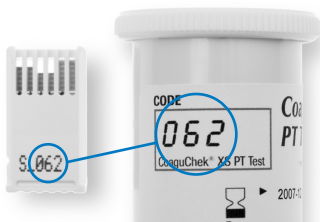

Make sure that the 3-digit code number on the new test strip container matches the 3-digit code number on the new code chip.

3. Insert New Code Chip




Slide the new code chip into the code chip slot until it snaps into place.

Integrated Quality Controls

The CoaguChek XS System has built-in quality control functions in the meter and test strips. The meter automatically runs its own quality control test as part of every blood test, so you never have to run quality control tests with liquid quality controls.

When the quality control test runs, the letters QC flash on the meter's display. When the quality control test is finished, a checkmark (✓) appears following the letters QC. Then the meter continues to run the blood test.

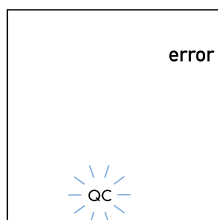

If the quality control test fails, the meter displays this error message. See the Error Messages section in this manual for an explanation of this and other error messages and what to do when they occur.

Testing a Blood Sample

Tips for a Good Fingerstick

For fingerstick blood testing, increasing the blood flow in your finger will help you get a good drop of blood. Before you stick your finger, try the following techniques until you see that your fingertip has good color:

- Warm your hand by holding it under your arm, use a hand warmer, and/or wash your hand with warm water.
- Hold your arm down by your side, so that your hand is below your waist.
- Massage your finger from its base.

If needed, immediately after pricking, gently squeeze your finger from the base to encourage blood to flow.



Important Notes About Blood Testing

Always

- Operate the meter at temperatures between 59°F and 90°F (15°C and 32°C).
- Refer to the test strip package insert for proper use and handling of test strips.
- Keep the test strip guide and meter clean. See Cleaning the Meter section in this manual for more information.

Never

- Store the meter in extreme temperatures below 59°F or above 90°F (below 15°C or above 32°C).
- Store the meter in damp or humid conditions (greater than 85% humidity).
- Remove or insert the code chip while the meter is performing a test.
- Use a code chip from a box of test strips other than the one in use.
- Touch or remove the test strip during a test.
- Wait more than 15 seconds after sticking your fingertip before applying the blood.

- Add more blood after the test has begun.
- Touch any buttons while a test is in progress.
- Perform a test with a drop of blood from a previous fingerstick.

Infection Control

The ACCU-CHEK® Softclix lancet device is intended for use by a single person and is not suitable for use where testing different persons with the same device may lead to infections.

Preparing for a Test

1. Gather Items




Gather the following items:

- CoaguChek XS Meter
- Container of test strips
- Test strip code chip
- ACCU-CHEK Softclix lancet device and lancet

Each box of test strips comes with a matching code chip. Every time you open a new box of test strips, you must replace the code chip.

2. Match Code Numbers

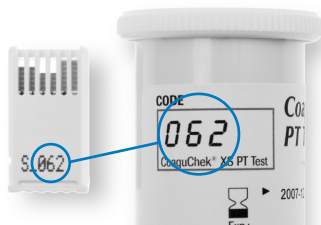

Make sure the 3-digit code number on the test strip container and the code chip match.

3. Insert Code Chip



Make sure the meter is turned off. With the code number facing up, insert the code chip into the code chip slot until it snaps into place.

4. Prepare Lancet Device



Pull off the cap of the lancet device. Insert a new lancet. Twist off the lancet's protective cap. Put the cap back on the lancet device. Line up the notches for the cap to fit. Select the penetration depth.

Press the plunger. A yellow dot appears in the release button.

5. Wash Hands



Wash your hands in warm, soapy water.

Make sure your fingertip is thoroughly dry.

Performing a Test

1. Get Ready



Take a test strip out of the container.

Close the container tightly.

You have 10 minutes to use a test strip once you remove it from the container.


2. Insert Strip




Slide the test strip into the test strip guide in the direction of the arrows until it stops.


■ *The meter turns on. The code number of the inserted code chip flashes on the display.*

3. Match the Code Numbers

Confirm that the number displayed matches the number on the test strip container, then press the M button .

If the numbers are different, make sure you are using the code chip that came with the test strips you are using.

 An hourglass appears as the meter warms up, which takes about 30 seconds

 When the meter is warmed up a flashing test strip appears and the meter begins a countdown. You have 180 seconds to apply blood to the test strip.



4. Collect the Blood

Massage your finger until you see increased color in your fingertip.

Keeping your hand down, press the tip of the lancet firmly against the side of your fingertip. Press the release button.

Gently squeeze from the base of your finger to develop a hanging drop of blood.




5. Identify the Target Area

Find the target area on the test strip.

To prevent error messages, the meter must be on a table free of vibrations.



6. Apply the Blood

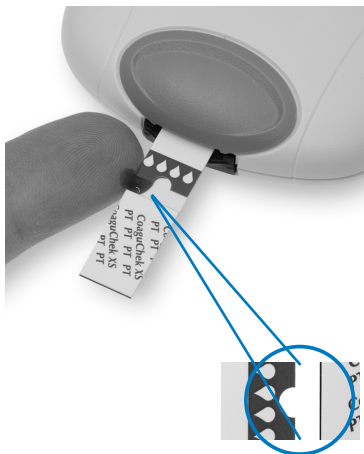

Within 15 seconds of sticking your fingertip, apply the blood to the target area of the test strip—from the side of the test strip.


■ *Hold the blood drop to the test strip until you hear a beep. The flashing blood drop symbol disappears.*

Do not add more blood to the test strip. Do not touch the test strip.

■ *The result appears in about 1 minute.*

A black and white photograph showing a person's hand holding a pen over a log book. To the left is a glucometer displaying "06:15:11" and a large number "26" with "mM" below it. The log book has a header section with fields for "Date", "Time", "Test Strip Lot No./Exp. Date", and "Patient Name/Result". The first row contains handwritten entries: "Wed/Fri", "10:50 am", "2014-07-25", and "26".


Call your doctor and/or the service provider that provides your test strips and the handling of your test results.

Remove the lancet from the lancet device. Place the used test strip and lancet in a puncture-proof container with a lid. Turn the meter off .


If the meter is dirty, wipe it clean with a lint-free tissue and an approved cleaning solution. See Cleaning the Meter section of this manual.

Very Low or Very High Test Results

The CoaguChek XS PT test strips provide test results if the INR value is between 0.8 and 8.0. If the meter displays < (less than) 0.8 or > (greater than) 8.0, repeat the test. If, when you repeat the test, you get the same result (either < 0.8 or > 8.0), call the Roche Diagnostics Technical Service Center at 1-800-428-4674.

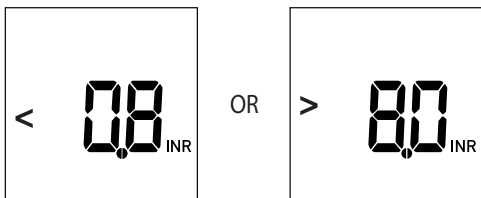

If you see “error 7,” this means the meter was unable to detect a clot. Repeat the test. Be sure to carefully follow the steps on the previous pages. For example, make sure the fingertip is thoroughly dry, use the meter on a surface free of vibrations, and apply the blood drop

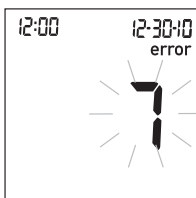

within 15 seconds of sticking the fingertip. If you still get “error 7,” call your doctor immediately to arrange for testing using another method.

If a “c” is displayed along with the result, the hematocrit value might be very low or the blood sample might not have been collected properly (e.g., wet hands). Repeat the measurement and make sure that the patient’s hands are dry. If the message persists, perform a hematocrit check.

Memory

Storing Test Results in Memory

The CoaguChek XS Meter automatically stores up to 300 test results and their dates and times in its memory. If the memory is full when you perform a test, the oldest result is automatically deleted. The most recent result is always saved.


Note: All test results remain in memory even when the meter is without batteries.


Reviewing Stored Test Results

You can review stored test results even when the meter's battery power is low.

To review results in memory:

1. Access the Memory

Press the M button . The meter turns on, if it is not already on, and goes to Memory mode.

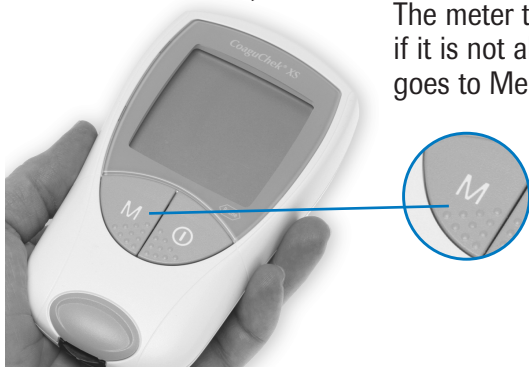

2. View Most Recent Result




The most recent test result appears. The letters mem indicate that you are viewing a result in memory. The time and date of the test also appear.

If there are no results in memory, a 0 appears in the display's top-right corner.

3. View Earlier Results



To view earlier results, press the M button  again.

After you have viewed all the results in the memory, 3 dashes appear.



Erasing Stored Test Results


You can erase all of the test results that are stored in the meter's memory. You cannot, however, erase individual test results.

To erase all stored results:

1. Go to Erase mode.




With the meter turned off, press and hold down the M button . While you are holding down the M button, press the ON-OFF  button and then hold down both buttons for at least 5 seconds.

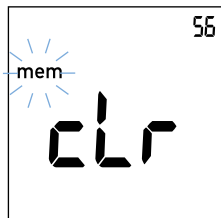


The meter displays mem (flashing) and clr. The number of results in memory is shown in the top-right corner of the display.

2. Confirm



Press the M button  to confirm that you want to erase the entire memory.

The hourglass symbol flashes while the test results are being erased.

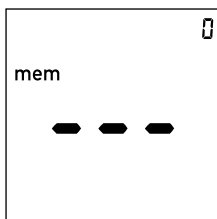

Then, the counter is set to 0 and 3 dashes appear.

Note: To exit Erase mode without erasing the results, press the ON-OFF button instead.

Cleaning/Disinfecting the Meter

Please follow the procedures below to clean and disinfect the meter. Failure to follow these procedures may cause malfunction of the meter.

- Clean the meter only when contaminated with blood.
- Do not use sprays of any sort.
- Ensure that swab or cloth is only damp, not wet.

Useful tip: To prevent contamination, apply blood via side-dosing directly from fingertip.

Cleaning/Disinfecting the exterior

- Use 10% bleach solution (1 part bleach and 9 parts water) or 70% isopropyl alcohol (rubbing alcohol) to clean and disinfect the meter housing (the exterior of the meter).
- Ensure that the blue test strip guide cover remains tightly closed while cleaning the housing.


1. Clean/Disinfect the Exterior



With the meter turned off, wipe the meter's exterior clean.

- Do not let liquid accumulate near any opening. Make sure that no liquid enters the meter.

2. Dry the Exterior

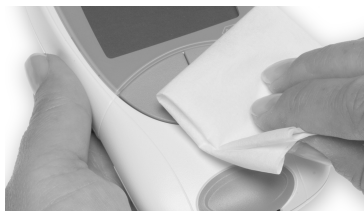

- With a lint-free tissue, wipe away residual moisture and fluids after cleaning the housing.
- Allow wiped areas to dry for at least 10 minutes before performing a test.

Cleaning/Disinfecting the Test Strip Guide

- Use 10% bleach solution (1 part bleach and 9 parts water) or 70% isopropyl alcohol (rubbing alcohol) to clean the test strip guide.

1. Open the Cover



With the meter turned off, use your thumbnail to open the cover of the test strip guide by pressing its front edge upward.

2. Clean/Disinfect the Test Strip Guide



- Hold the meter upright with the test strip guide facing down.
- Clean the easily accessible areas with a cotton swab.
- Be sure the swab is only damp, not soaking wet, to ensure excess fluid does not enter the meter.
- Wipe away residual moisture and fluids.

Caution: Do not insert any objects into the test strip guide. Doing so could damage the electrical contacts behind the test strip guide.

3. Allow to Dry



With the cover off, allow the test strip guide to dry for at least 10 minutes before re-attaching the test strip guide cover and testing again.

4. Close the Cover



Close the cover, and make sure it snaps into place.

Error Messages

You may see the following error messages while using the CoaguChek XS Meter. If you see an error message, first try to correct the problem using the solution described below. If the problem persists, call the Roche Diagnostics Technical Service Center at 1-800-428-4674.


Error: Test Strip

Possible causes:

- A test strip was already inserted when the meter was turned on.
- The meter timed out after you inserted the test strip.
- The test strip is unusable.
- The test strip is not a CoaguChek XS PT test strip.


Solution:

Remove the test strip. Then repeat the test with a new CoaguChek XS PT test strip.

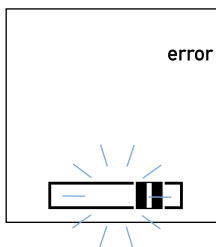

Error: Meter Temperature

The meter is too cold or too warm to measure correctly.

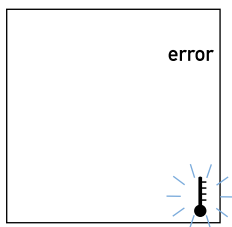


Solution:

Turn the meter off and allow it to stand for about 30 minutes at room temperature between 59°F and 90°F (15°C and 32°C).

Error: Battery

The battery level is too low.

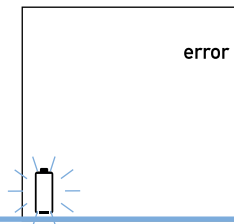

Solution:


Replace the batteries. See the Batteries section of this manual.

Error: Test Strip Guide Cover

The test strip guide cover is not properly closed.

Solution:

Close the test strip guide cover.

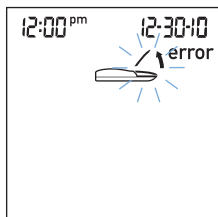


Error: Code Chip

The code chip is missing, not properly inserted, or damaged.

Solution:


Check to see if you have the correct code chip properly inserted into the meter. For more information, see the Code Chip section of this manual.

If the code chip is damaged, call the Roche Diagnostics Technical Service Center at 1-800-428-4674.

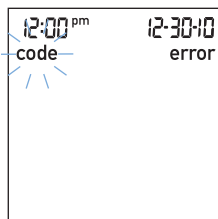

Error: Test Strip Expired

The test strip has expired.

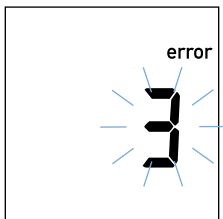


Solution:

Check the meter's date setting. If it is not correct, set the correct date. For more information, see the Meter Setup section of this manual.

If the date is correct, turn the meter off and remove the code chip and the test strip. Then use the code chip and a test strip from a new box of test strips.

Error: Test Strip Unusable

The test strip is unusable.

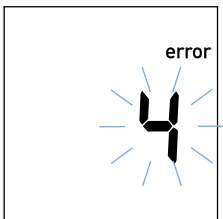


Solution:

Turn the meter off, remove the test strip, and then re-insert it. If the error message reappears, discard the unusable test strip and use a new one.

Error: Time Exceeded

You did not apply blood to the test strip within 180 seconds after the blood symbol appeared.

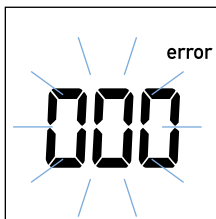


Solution:

Turn the meter off and remove the test strip. Repeat the test using a new test strip and blood taken from a new fingerstick from a different finger.

Error: Blood Application

Error applying blood to the test strip.

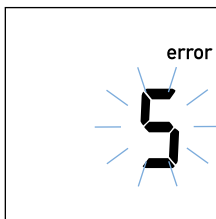


Solution:

Turn the meter off and remove the test strip. Repeat the test using a new test strip and blood taken from a new fingerstick from a different finger.

Error: Test Strip Interference

The test strip was touched or removed during the test.

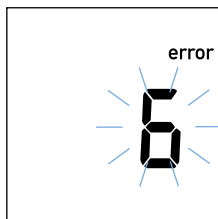

Solution:


Turn the meter off and remove the test strip. Repeat the test using a new test strip and blood taken from a new fingerstick from a different finger.

Do not touch or remove the test strip when a test is in progress.

NOTE: For meters with serial number UP0910000 and lower: In rare cases, "ERROR 6" may indicate extremely high coagulation times (> 10 INR, < 5% Quick). If "ERROR 6" is displayed repeatedly, please contact your physician without delay.

Error: Quality Control Failure

The test strip failed the internal quality control check. The test strip is unusable.

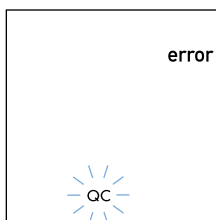


Solution:

Turn the meter off and remove the test strip. Repeat the test using a new test strip and blood taken from a new fingerstick from a different finger.

Error: Measurement Error

Measurement error caused by the blood sample.

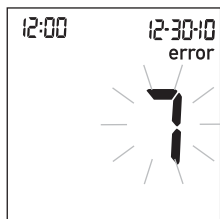


Solution:

If you see “error 7,” this means the meter was unable to detect a clot. Repeat the test. Be sure to carefully follow the steps on the previous pages. For example, make sure the fingertip is thoroughly dry, use the meter on a surface free of vibrations, and apply the blood drop within 15 seconds of sticking the fingertip. If you still get “error 7,” call your doctor immediately to arrange for testing using another method.

In rare cases, patients with abnormal or unusually long clotting times may receive an “ERROR 7” message. If you still receive this message when you repeat the test, you must use an alternative test method to confirm the result. Contact your physician without delay.

Error: Internal Error

An error occurred during the internal diagnostic test.

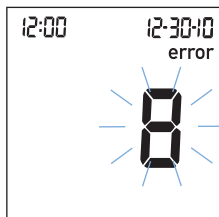


Solution:

Turn the meter off and remove the batteries. Wait at least 1 minute before re-inserting the batteries into the battery compartment. Re-set the date and time as described in the Meter Setup section of this manual.

Caution: The date and time must be set correctly.

Repeat the test. If you see the same error message again, the meter has a defect. Call the Roche Diagnostics Technical Service Center at 1-800-428-4674.

Error: Internal Error

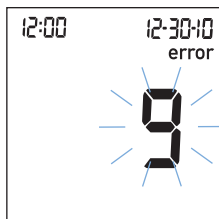

Solution:

Because this error indicates possible damage to the heater plate contacts, call the Roche Diagnostics Technical Service Center at 1-800-428-4674 to have the meter replaced.

Other Information

Product Limitations

Please read the information packaged with the test strips regarding up-to-date product specifications and limitations.

Product Specifications

Operating Conditions

Temperature	+59°F to +90°F (+15°C to +32°C)
Relative humidity	Less than 85% (without condensation)
Maximum altitude	14,000 feet (4300 m)
Placement	Operate the meter on a level, vibration-free surface or hold it so it is roughly horizontal.
Measuring range	Refer to the test strip package insert.
Memory	300 test results with date and time
Interface	Infrared interface, LED/IRED Class 1
Battery operation	4 AAA batteries
Number of tests per set of batteries	Up to 2 years or up to 300 tests (depending on frequency of use)
Safety class	III
Automatic power-off	After 3 minutes
Dimensions	5.43 x 3.07 x 1.10 in (138 x 78 x 28 mm)
Weight	4.48 oz. or 127 g (without batteries)

Sample Material

Sample type	Capillary whole blood or non-anticoagulated venous whole blood.
Sample size	At least 8 μ L
Interference	Refer to the test strip package insert.

Non-Operating Storage and Transport Conditions

Temperature range	-13°F to +158°F (-25°C to +70°C)
Relative humidity	10% to 85% (without condensation)

Support/Services

Questions





Please call the Roche Diagnostics Technical Service Center at 1-800-428-4674 if you have questions regarding the handling of your meter, the reliability of your results, or if you suspect the meter is defective.









Repairs






Please note that repairs, new settings or other modifications to the meter may only be performed by persons authorized by Roche Diagnostics.

Symbols

The following table lists all of the display screen icons and their meaning.

Symbol	Meaning
	Test strip (without sample application area)
	Test strip (with sample application area)
	Apply sample
	User must wait until the meter has completed an action.
24 h	24-hour time format
12 h	12-hour time format
am	Time between midnight and noon (in 12-hour time format)
pm	Time between noon and midnight (in 12-hour time format)
%Q	Indicates the results are displayed as a Quick percentage value.
Sec	Indicates the results are displayed in Seconds.
INR	Indicates the results are displayed in INR units.

Symbol	Meaning
	Beep tone is turned on
	Beep tone is turned off
	Result is above the chosen therapeutic range (only with INR as unit) Result is below the chosen therapeutic range (only with INR as unit)
	<ul style="list-style-type: none"> ▪ Results in the chosen unit ▪ Error numbers
	Memory contains no results or no further results
	Displays the time in HH:MM format
	Displays the date in DD-MM-YY, MM-DD-YY or YY-MM-DD format.
set	The monitor is in Setup Mode.
code	Indicates the code number of the code chip inserted in the meter.
	Result in the chosen unit is above the measuring range. Result in the chosen unit is below the measuring range.

Symbol	Meaning
	<p>Battery status:</p> <ul style="list-style-type: none"> ▪ When the batteries still have their full charge, all segments are lit. ▪ Individual segments disappear one by one as the batteries become weaker. ▪ When there is no segment remaining, you can no longer perform a test. You can, however, still access the meter's memory.
mem	The meter is in Memory Mode.
	Automatic quality control completed successfully
error	Reports an error (see Error messages)
	Room or meter temperature is outside the acceptable range.
	Communication is taking place via the infrared interface
	Measurement chamber cover is open.

Disposal of the Meter, Test Strips, Lancets, and Batteries



Any product coming in contact with blood is considered contaminated (potentially infectious).* During normal testing, the meter may come in contact with blood. Lancing devices may also be considered sharps. Disposal of sharps is regulated by law in many jurisdictions.

The European Union has a requirement for improving waste management practices for certain electronic equipment, but meters fall outside the scope of the European Directive 2002/96/EC.** This is not a requirement for the United States; however, Roche is committed to recycling and sustainability. Please consider the following points when disposing of your used testing materials:

- Comply with any laws or ordinances relating to the disposal of sharps and/or contaminated products. Contact your local health department or other appropriate authorities for proper handling and disposal of used meters, used test strips, used lancets, and used batteries.
- Consider recycling of the meters and batteries at an appropriate facility. Be aware the meter is potentially hazardous electronics scrap (e-scrap) and should be disposed of accordingly. The batteries are potentially hazardous also and should be disposed of accordingly.
- Decontaminate the meter before recycling or disposing. Wipe the outside of the meter with dilution of bleach solution (one part bleach to nine parts water).
- Users in professional environments (i.e., healthcare professionals) should follow the existing policies and procedures governing the proper handling and disposal of potentially infectious waste, e-scrap and batteries.

*29 CFR 1910.1030 - Bloodborne pathogens

**Directive 2002/96/EC - Directive on waste electrical and electronic equipment (WEEE)

Warranty

CoaguChek XS Meter Limited (2 Year) Warranty

ROCHE DIAGNOSTICS warrants, to the original purchaser only, that the meter shall be free from all defects in material and workmanship for a period of two years from the date of purchase.

Purchaser's sole and exclusive remedy, with respect to the CoaguChek XS meter and parts thereof, shall be the repair and/or replacement of the meter or parts at the option of Roche Diagnostics.

THE ABOVE WARRANTY IS EXCLUSIVE OF ALL OTHER WARRANTIES, AND ROCHE DIAGNOSTICS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ROCHE DIAGNOSTICS BE LIABLE TO THE PURCHASER OR ANY OTHER PERSON FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL OR PUNITIVE DAMAGES ARISING FROM OR IN ANY WAY CONNECTED WITH THE PURCHASE OR USE OF THE METER. NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IF ANY IS IMPLIED FROM THE SALE OF THE COAGUCHEK XS METER. NO WARRANTY, EXPRESS OR IMPLIED (IF ANY), SHALL EXTEND FOR A LONGER DURATION THAN THE DURATION OF THE EXPRESS WARRANTY STATED ABOVE.

Warranty

The foregoing warranty shall not apply to a meter which is damaged by accident or subject to alteration, misuse, tampering, and/or abuse, including the use of Dispatch® products. Meters which show damage or misuse will be handled in accordance with the non-warranty service policy of Roche Diagnostics.

The warranty of the repaired/replacement meter will expire on the date of the original warranty expiration or ninety (90) days after shipment of a replacement system, whichever period is longer.

ACCU-CHEK, COAGUCHEK and SOFTCLIX
are trademarks of Roche.



Roche Diagnostics GmbH
Sandhofer Strasse 116
68305 Mannheim, Germany

Made in Germany

Manufactured for and distributed in the U.S.A. by:
Roche Diagnostics
9115 Hague Road
Indianapolis, IN 46250-0457

Rx Only

www.roche.com
www.coaguchek-usa.com
www.usdiagnostics.roche.com